

General Instructions

Adjustment of idling speed refer to Job No. 07-4.

Removal

- 1 Unscrew air cleaner.
- 2 Pull cable from starter cover, unscrew fuel lines and disconnect carburetor linkage.
- 3 Loosen carburetor fastening nuts on intake pipe and remove carburetor.

Installation

- 4 Place insulating flange (1) and (3) and shielding plate (2) on intake pipe acc. to Fig. 07-2/1.
- 5 Install carburetor vice versa to removal.
- 6 Install air cleaner. Place rubber rings (8) on carburetor and position air cleaner in such a manner that the water separator is inserted into the rubber sleeve (7). Tighten fastening bolts (2). Fit warm air hose and engine breather hose (Fig. 07-2/2).

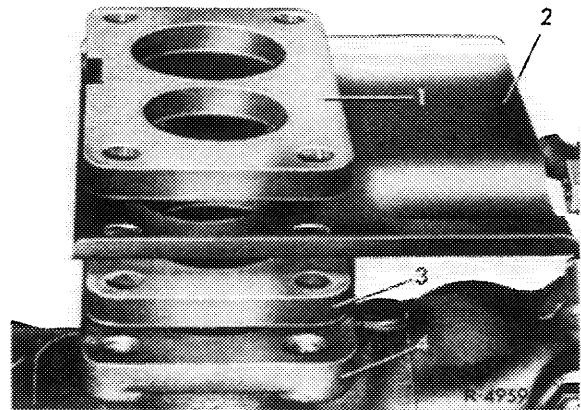


Fig. 07-2/1

- | | |
|---------------------|---------------------|
| 1 Insulating flange | 3 Insulating flange |
| 2 Shielding plate | 4 Intake pipe |

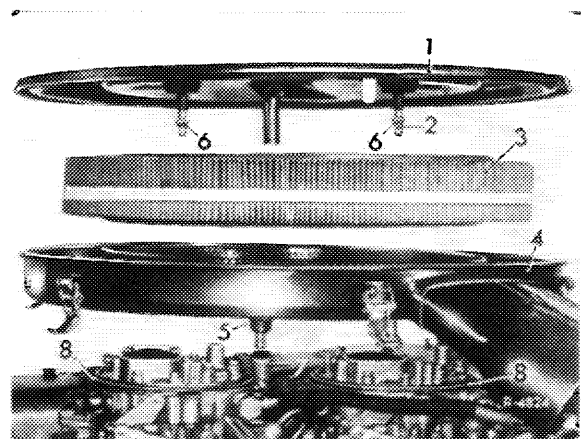


Fig. 07-2/2

- | | |
|----------------------|-------------------------------|
| 1 Air cleaner cover | 5 Water separator |
| 2 Fastening bolts | 6 Collar nut |
| 3 Air cleaner insert | 7 Rubber sleeve breather pipe |
| 4 Air filter bottom | 8 Rubber ring |