## Checking

- 1 Check begin of delivery of 1st cylinder (07.1-109 or 07.1-110).
- 2 Screw sight glass with line or overflow pipe to 4th cylinder of injection pump.
- 3 Check begin of delivery of 4th cylinder.

If begin of delivery of 1st to 4th pump element deviates by more than 2°, remove injection pump and adjust on a Bosch injection pump test bench.