

Special tools

Counter-support for internal extractor



000 589 33 33 00


Internal extractor 14.5–18.5 mm



000 589 25 33 00

Removal

1 Draw ball bearing and locking ring together off crankshaft, using counter-support and internal extractor.

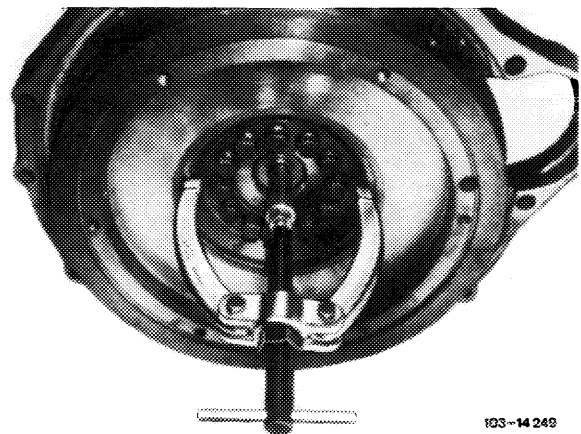

Installation

- 2 Coat new ball bearing with roller bearing grease and drive into crankshaft, using suitable drift.
- 3 Drive locking ring home.