


## 15-530 Renewing spark plugs

---

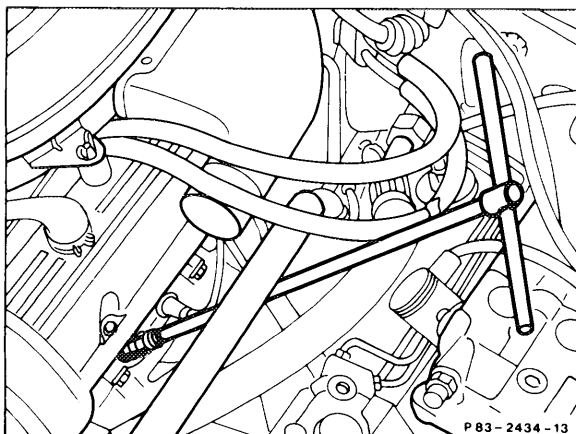

- |                            |  |
|----------------------------|--|
| Spark plug connector ..... | slacken by turning to left and right and pull off, fit on. Blow out recesses with compressed air.    |
| Ignition cables .....      | clean, when fitting on, ensure cable lines are correctly laid.<br>Ignition sequence: 1-5-4-8-6-3-7-2 |
| Spark plugs .....          | remove and install.<br>Tightening torque 25-30 Nm.   |

### Special tool

