


07.3-215 Removal, reinstallation of injection valves

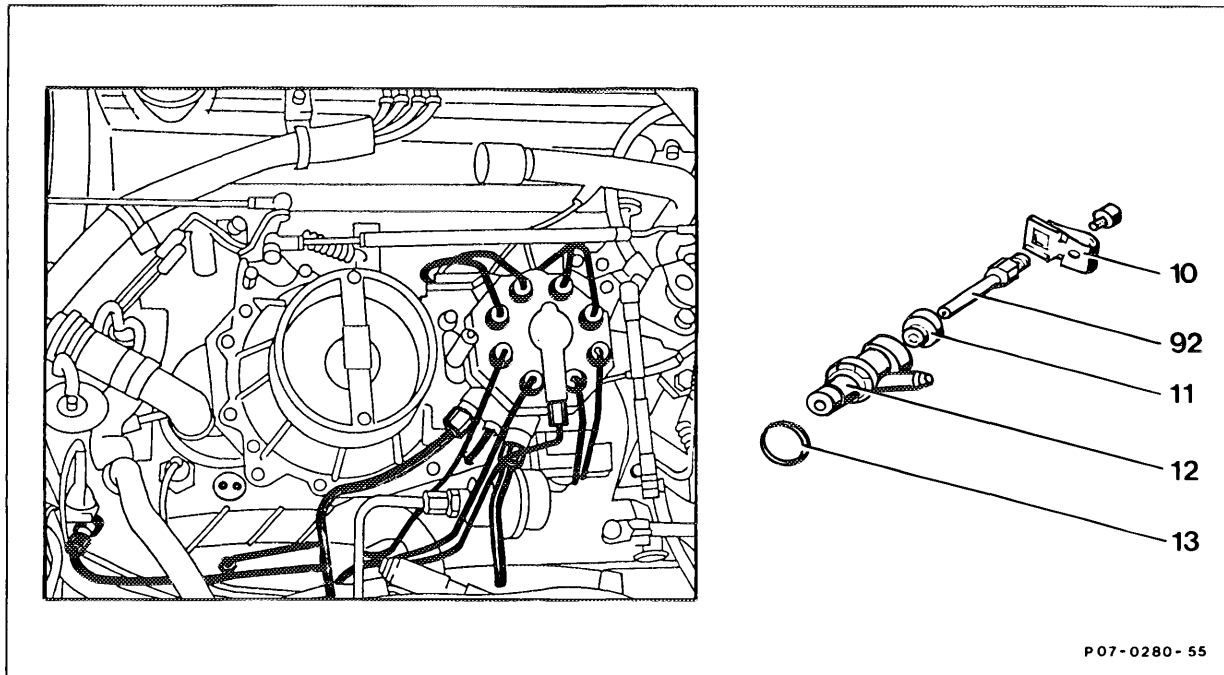

P 07 - 0280 - 55

Fuel and injection lines	remove, reinstall, counterhold injection valves. Tighten with 10–15 Nm (reference value).
Retaining clip (10)	remove, mount.
Engine 116, control bearing pedestal	front right, remove, reinstall.
Injection valves (92)	pull out. Ensure that the insulating sleeve (12) is not pulled out as well. If so, renew insulating sleeve (12) and O-ring (13).
Rubber sealing ring (11)	renew.

Note

Brass injection valves with Viton seat are installed for improved sealing.
 Production breakpoint: Phased-in 1990.