


07.3-268 Renewing rubber buffer for fuel pump assembly

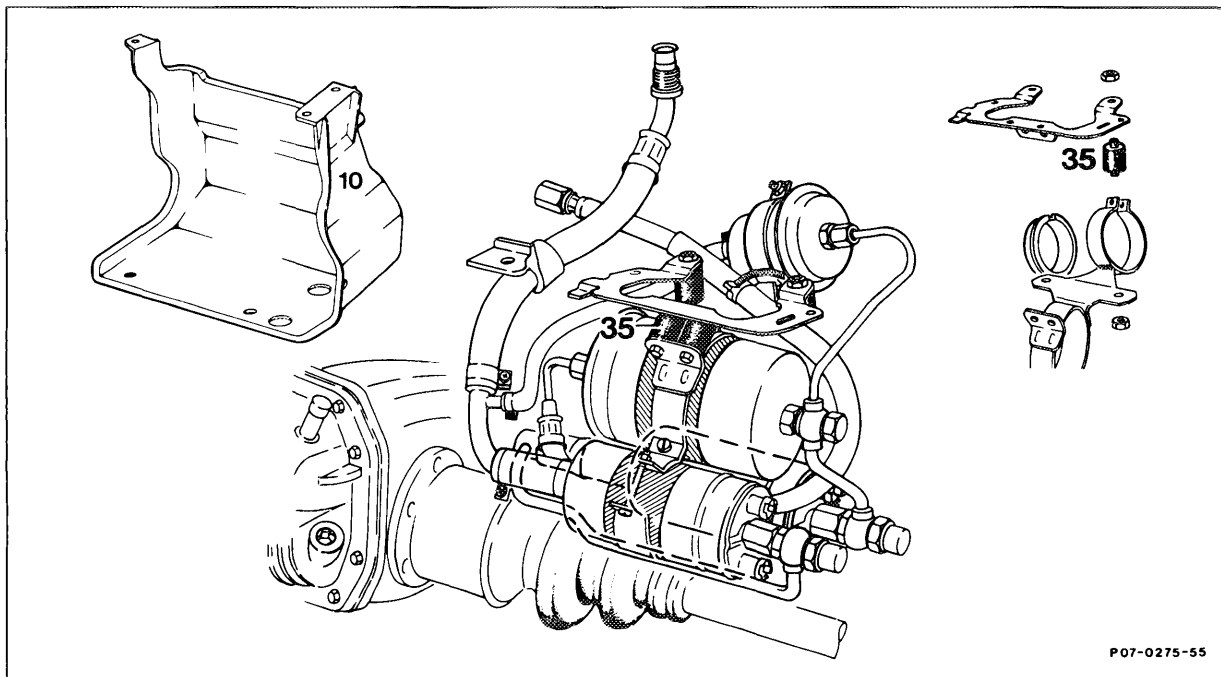

P07-0275-55

- | | | |
|-----------------------|-------|--------------------|
| Protective cover (10) | | unscrew, screw on. |
| Rubber buffer (35) | | remove, reinstall. |