

## 03-330 Removal and installation of radial ball bearing and closing ring in crankshaft

---

### Special tools

Internal puller 14.5–18.5 mm



000 589 25 33 00

Countersupport




000 589 33 33 00

---

### Removal

---

1 Pull ball bearing and closing ring together out of crankshaft by means of puller.

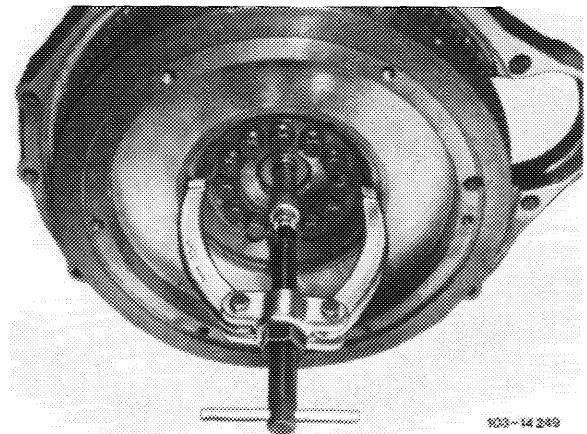

### Installation

---

2 Provide new ball bearing (1) with high-temperature grease and knock into crankshaft by means of a suitable mandrel.

3 Knock-in closing ring (2).

