

Conventional tool

Ohmmeter

Note

Remove throttle valve housing for renewing throttle valve switch (07.3-230).

Adjusting

- 1 Set ohmmeter to measuring range 0-∞ ohm.
- 2 Check idle speed stop. For this purpose, push throttle valve to idle speed stop. Connect ohmmeter to jack 1 and 2.
- 3 Turn throttle valve switch until indication reads 0 ohm.
- 4 Slightly raise throttle valve, readout should move to ∞ ohm.
- 5 Check full load stop. For this purpose, push throttle valve to full load stop and connect jacks 2 and 3. Readout should then be 0 ohm.
- 6 Turn throttle valve slightly in direction of idle, readout should move to ∞ ohm.

